

# EASYBOOT GLOVE SOFT APPLICATION

## The Easyboot Glove Soft is a lightweight, slim profile, form-fitting boot that is easy to apply.

It was designed to fit like a second skin over the hoof without adding bulk or width. This seamless boot hugs the hoof and responds like a natural foot. Flexible and tough, the Easyboot Glove Soft adds traction and protection to the hoof while allowing a free stride and natural breakover. Like a glove, this boot provides protection without hindering mobility.

The Easyboot Glove Soft material stretches over the hoof and clings to the wall so that debris stays out of the boot even through sandy and muddy conditions. No external hardware means that there is no need to worry about grass or sticks getting caught in the boots. The molded urethane cap at the rear of the gaiter fits the contours of the heel bulb while offering generous proportions of stretch and strength.

*Sold Individually.*



1.



2.



3.



4.




5.



6.

## Fitting the Easyboot Glove Soft to Your Horse

1. Fold the gaiter back to get it out of the way.
2. Pick up the horse's leg and support the cannon bone between your knees so that you can use two hands when applying the boot.
3. Using technique rather than strength, place the boot over the horse's toe and, using a slight back and forth twisting motion, slide the boot on the rest of the way. Put the foot down on the ground and allow the horse to put weight into it. Don't use the gaiter to pull the boot on. If you are having trouble, please refer to the fitting video found at [easycareinc.com](http://easycareinc.com).
4. Check for proper fit. Make sure all portions of the boot (with the exception of the gaiter) are below the hairline. The boot should be very snug and not twist on the hoof. Do not use the boot if it is loose or if the main part of the boot touches the coronary band.
5. Fasten the Easyboot Glove Soft Gaiter.
  - » Pull the side of the gaiter with the loop (fuzzy side of the hook and loop) tightly around the pastern. Notice the end is long and will not be in the center.
  - » Pull the side of the gaiter with the hook (rough side of the hook and loop) tightly. This will overlap the first part of the gaiter that is now against the pastern.
  - » Fasten the loop strap.
  - » Pull the hook side over the loop strap.
6. The tighter the fit, the better the boot will perform. Overlap the hook and loop straps as much as needed to insure a tight fit and avoid rubbing issues. (See illustration below)

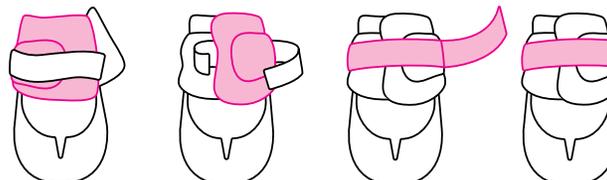

7. This overlapping does not compromise the integrity of the gaiter. When properly tightened, it should be difficult to fit a finger between the pastern and the top of the gaiter.
8. Due to their great deal of elasticity, gaiter straps cannot be over-tightened.

## Removing the Easyboot Glove Soft


1. Unfasten the gaiter straps.
2. Slip the boot off the hoof.



**EasyCare Inc.**  
The Ultimate in Hoof Protection

# HOW TO MEASURE FOR THE EASYBOOT GLOVE SOFT

1. After a fresh trim, measure the width of the hoof across the sole at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurement with the size chart below.
4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are different by more than one size, this boot style is not recommended. Be sure to check your measurements against an alternative boot in the EasyCare line – another style may accommodate your horse's hoof shape better.

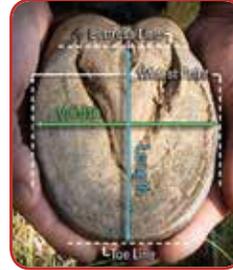

Success of the Easyboot Glove Soft and Easyboot Glue-On are determined by accurate measurements and a snug fit. **Do not assume that if you wear a certain size in another boot style, you will wear the same size Glue-On or Glove Soft.** We have found that measurements are more accurate and easier to take using the metric system.

Regular			Wide		
Size	Width in mm	Length in mm	Size	Width in mm	Length in mm
00	96-99mm	106-109mm	0	114-117mm	114-117mm
00.5	100-103mm	110-113mm	0.5	118-121mm	118-121mm
0	104-107mm	114-117mm	1	122-125mm	122-125mm
0.5	108-111mm	118-121mm	1.5	126-129mm	126-129mm
1	112-115mm	122-125mm	2	130-133mm	130-133mm
1.5	116-119mm	126-129mm	2.5	134-137mm	134-137mm
2	120-123mm	130-133mm	3	138-141mm	138-141mm
2.5	124-127mm	134-137mm			
3	128-131mm	138-141mm			
3.5	132-135mm	142-145mm			
4	136-139mm	146-149mm			
4.5	140-143mm	150-153mm			
5	144-147mm	154-157mm			

# Easyboot® Glove Soft

## APPLICATION GUIDE



### Join the Conversation

For tips and tricks follow EasyCare:



### A product of EasyCare Inc.

EasyCare Guarantee

800.447.8836 | easycareinc.com

All products should be used in accordance with the instructions in this application guide. EasyCare Inc. hereby disclaims responsibility for the misuse of any product and for losses incurred through the use of any product described in this guide, on EasyCare Inc. product packaging, or on easycareinc.com. EasyCare Inc. products are not intended to diagnose or cure any medical condition.



**EasyCare Inc.**  
The Ultimate in Hoof Protection